



**Installation, Operating, and
Maintenance Instructions for:**

DO DO16P-2

DO DO16P-3




Owner's Information

Model Number:

Serial Number:

Installation Date:

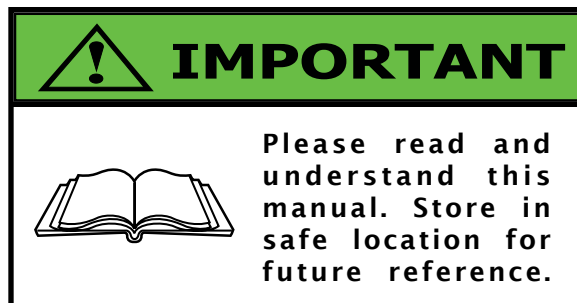

Everyone who operates this unit should understand basic operations and safety precautions! The time you take to fully understand the proper installation, maintenance and use of the machine will prolong its service life, and assure you of trouble free operation.

When unpacking, check to make sure all the parts shown on the Parts Breakdown near the end of this manual are included. If any parts are missing or broken, please call Dultmeier Sales as soon as possible.

Consumers should notice that this manual may differ slightly from the actual product as more improvements are made to our products. Some of the pictures in this manual may differ slightly from the actual product as well. Dultmeier Sales reserves the right to update designs and / or change the specifications at any time without incurring any obligation to install them on units previously sold.

If you have any questions or suggestions about this manual, please contact us.


Table of Contents

Mounting	1
Plumbing & Electrical	1
Operation	2
Maintenance	2
Parts Breakdown (DO16P-2)	3
Parts Breakdown (DO16P-3).....	4
Warranty Information	5

Installation and Operating Instructions For: Double Dosatron Dispenser Panel

Mounting

 1. Select mounting location on wall at height where unit can be easily serviced and is located near water source. Hold board level, and mark spots on wall for each mounting hole on board. Use 5/16" bit to drill 1-1/2" deep holes in the wall. Hold board on wall and insert 1/4" x 1-7/8" sleeve anchors (provided) in drilled holes. Tighten anchor nuts.



Plumbing & Electrical

1. Loosely fit clamps on hoses. **(C)**
2. Run city pressure line to water inlet. **(1)**



Do not exceed 85 PSI. Max. Operating temperature is 104° F (40° C)

3. If installing more than one system use clean water outlet from the first unit and run a hose to the water inlet of the second unit.
4. Install chemical suction hoses to chemical inlet #1 & chemical inlet #2. **(2)**




See Dosatron Operation Manual for proper adjustments & settings.

5. Place strainer end of chemical suction hoses into chemical concentrate.
6. Run a 3/4" hose from metered outlets to desired locations, install clamps. **(3)**
7. Tighten all clamps.



Turn off power before installing or servicing system.

8. The double dispenser system does not come with its own power source & requires a 24V signal for proper operation.
9. Wire from menu signal on terminal block in main control panel to solenoids. When solenoids are charged water will flow through metering system & then to bay. **(4)**
10. Check all electrical connections for proper fit before returning electrical service.

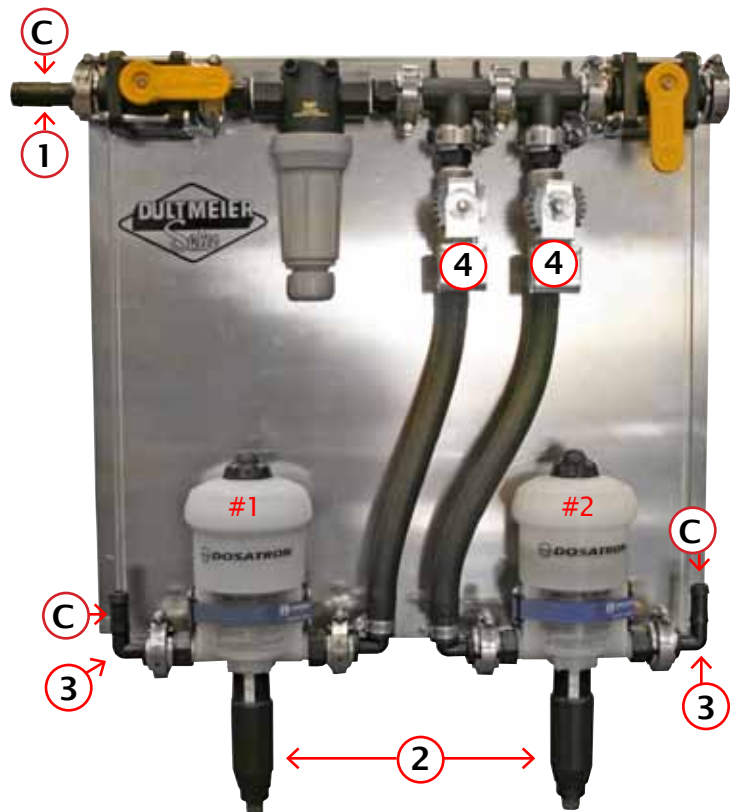

Operation

1. Inspect system for proper plumbing & wiring. Make sure all clamps are tight in both equipment room & out in bay. Check hoses for kinks & abrasion hazards. Re-Route if necessary.
2. Turn on water supply, check for leaks.
3. Energize Solenoids.



WARNING

Energizing solenoids requires power to equipment and can activate other systems. Take extreme caution when unit is powered and in standby mode.



DANGER

4. Adjust chemicals.



IMPORTANT

See Dosatron Operation Manual for proper adjustments & settings.


5. After unit has been properly adjusted & tested it is ready for service.

Maintenance

Check Unit -	Daily	Weekly	Monthly
Chemical Level	x		
Leaks	x		
Proper Chemical Settings		x	
Chemical Titration			x
Strainer			x
Hoses			x
Wiring			x

IMPORTANT: Refer to Dosatron Operations Manual (Page 41) for Injector Maintenance.


Parts Breakdown: DO16P-2

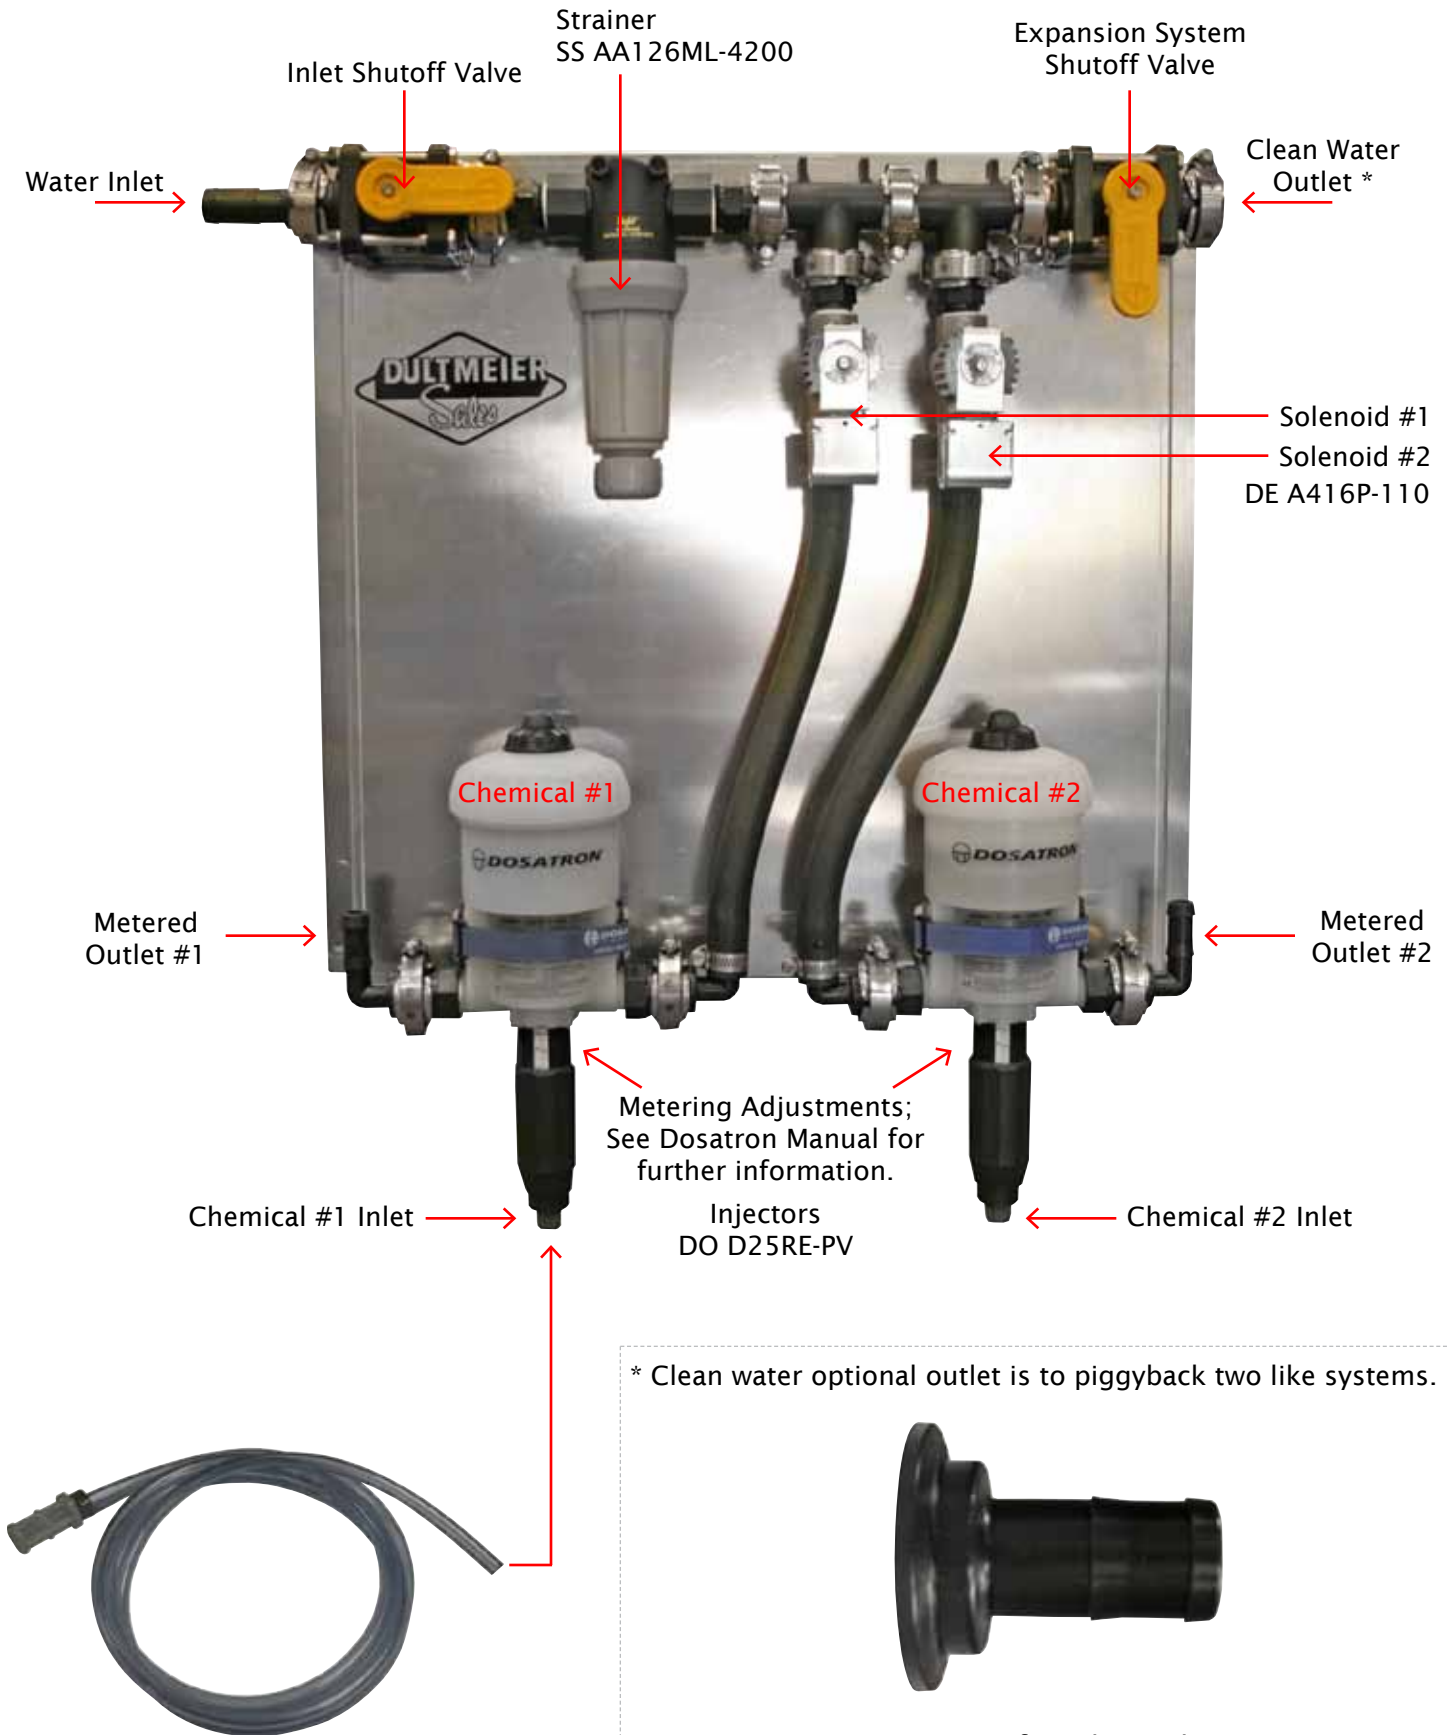

* Clean water optional outlet is to piggyback two like systems.

Remove safety plug and add expansion system hose barb for additional units.

Parts Breakdown: DO16P-3

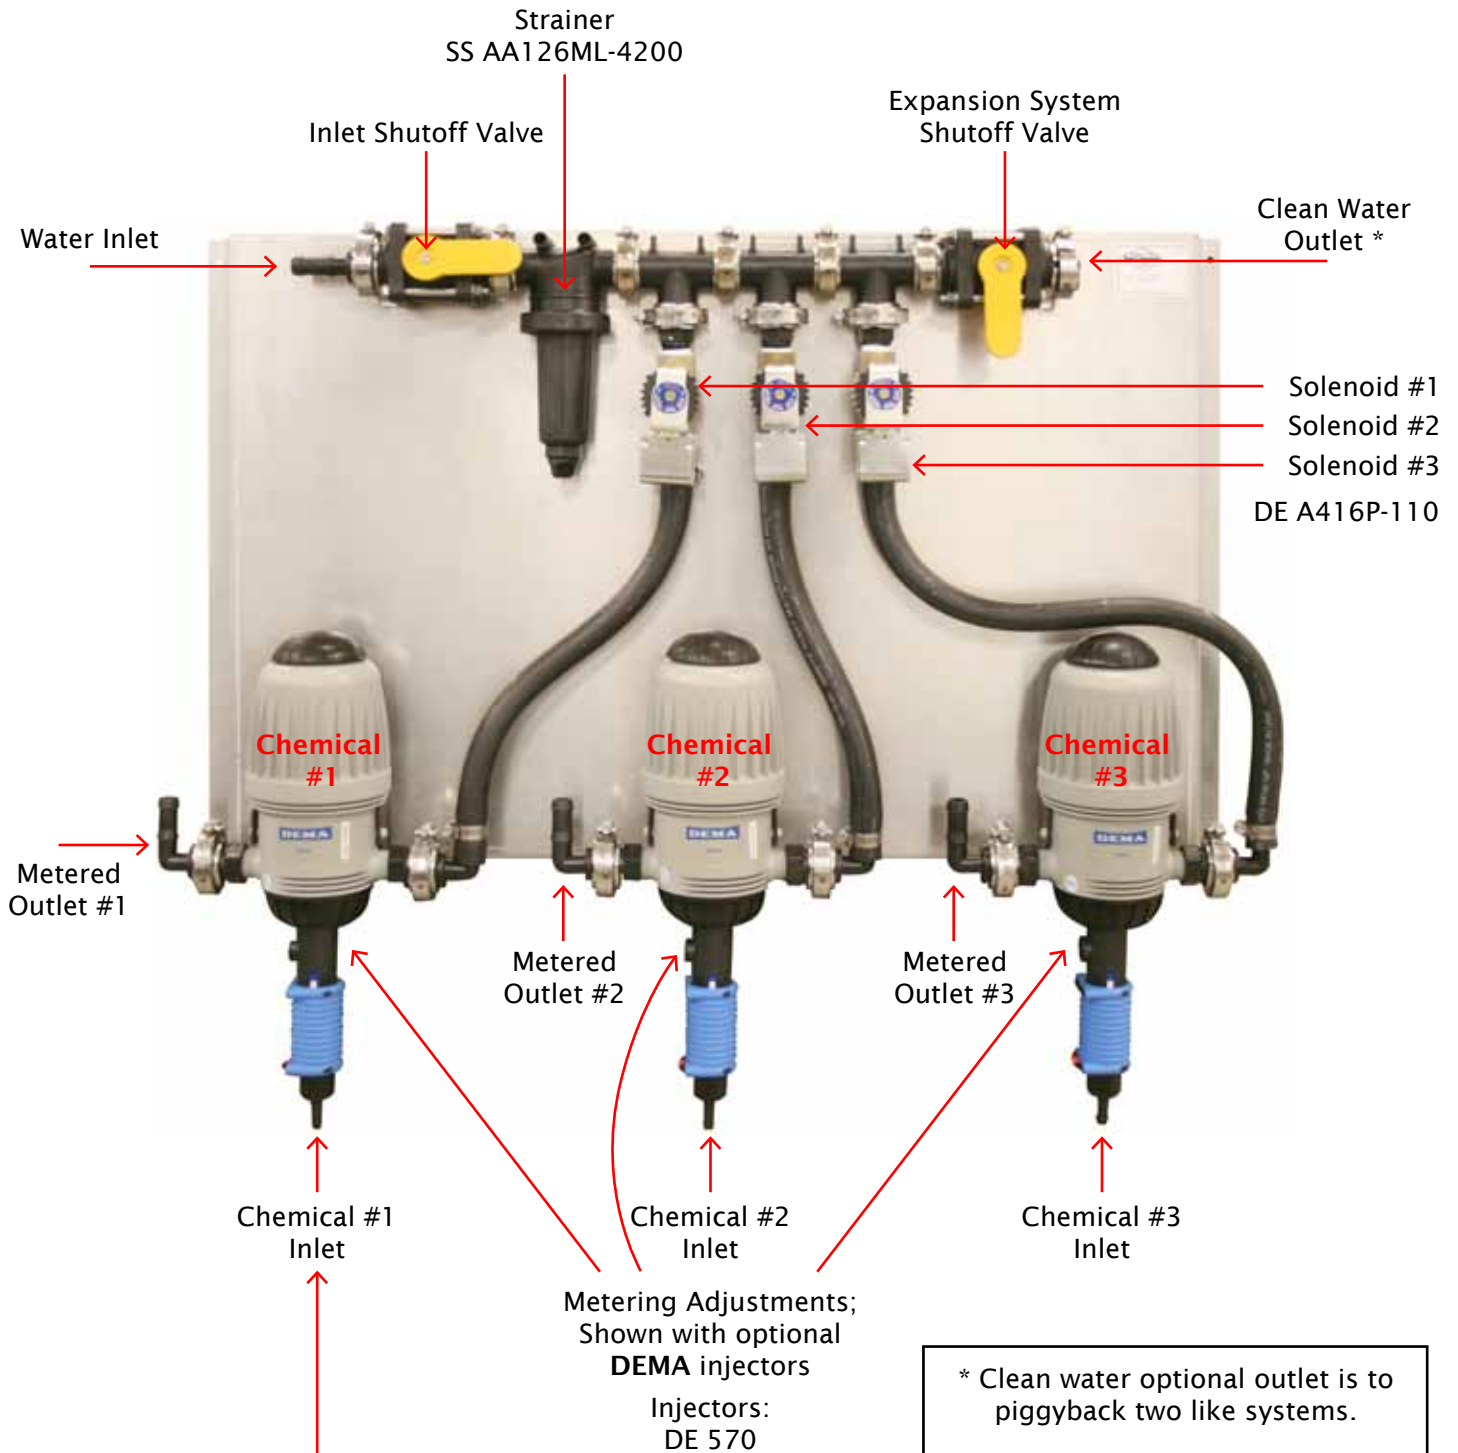

* Clean water optional outlet is to
piggyback two like systems.



Remove safety plug and
add expansion system hose barb for
additional units.



Notice Regarding Manufacturer's Limited Warranty

Dultmeier Sales Limited Liability Company (hereinafter Dultmeier), notifies you that component part(s) carry a manufacturer's limited warranty provided by the manufacturer of said component part(s). These warranties do not pertain to normal wear of component part(s) that may occur within any specified period. While Dultmeier is not the manufacturer of any of the component part(s), Dultmeier will assist you in processing any and all manufacturer's warranty claim if applicable and available. Any and all manufacturer's claims must be submitted in writing to the manufacturer within the warranty periods provided by the manufacturer.

Defective component part(s) that are to be considered for manufacturer's limited warranty must be returned to the manufacturer by prepaid shipment with the applicable manufacturer's limited warranty period. If the component part(s) are deemed to be defective under the manufacturer's warranty, Dultmeier will assist in obtaining a replacement or repair of the component part(s). Said component part(s) will be returned F.O.B. Omaha, Nebraska. Replacement or repair shall be the exclusive remedy for any breach of warranty. Labor for installation, either with respect to original or replacement part or components, is not covered under the manufacturer's limited warranty.

Neither the manufacturer nor Dultmeier warrants loss of income or consequential damages for injury or commercial loss resulting from any breach of warranty or warranties stated above.

The manufacturer's limited warranty as stated does not apply to component part(s) which have been improperly installed, misused, altered, neglected, abused or not installed, adjusted, maintained, or used in accordance with applicable codes and ordinances and in accordance with the manufacturer's specifications as to such factors.

Notwithstanding Dultmeier's willingness to assist in the processing of the manufacturer's limited warranty, Dultmeier makes no warranty against infringement of the like, makes no warranty of merchantability, makes no warranty of fitness for a particular purpose, and makes no other warranty, express or implied, including implied warranty arising from the course of dealing or usage of trade.

Compliance with all local, state and federal codes regarding the installation and operation of said equipment, parts and components shall be the responsibility of the purchaser. The rights and obligations of the parties shall be governed by the laws of the State of Nebraska.

Dultmeier Sales • 1-800-228-9666 Omaha, NE • 1-800-553-6975 Davenport, IA