



# Series LM-4950 Metering Pumps

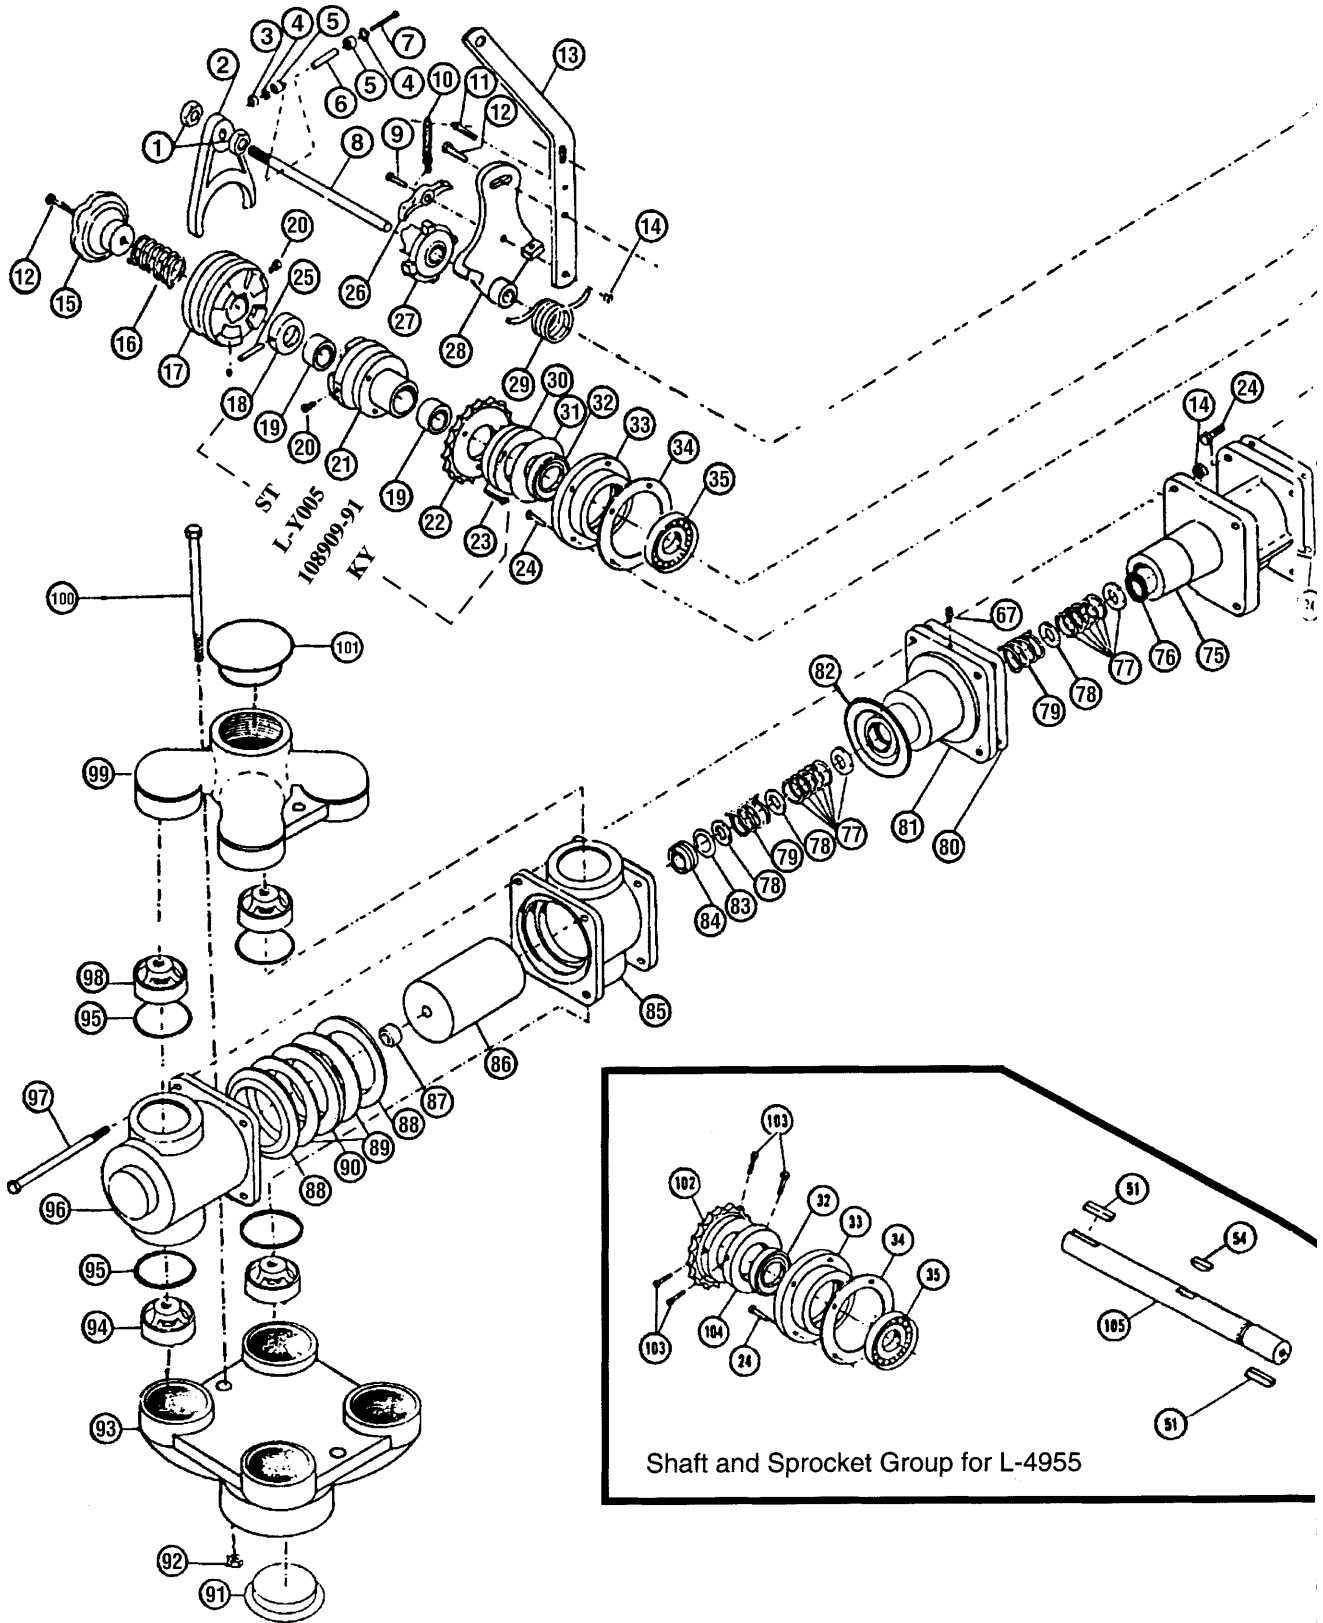

# Series LM-4950 Metering Pumps

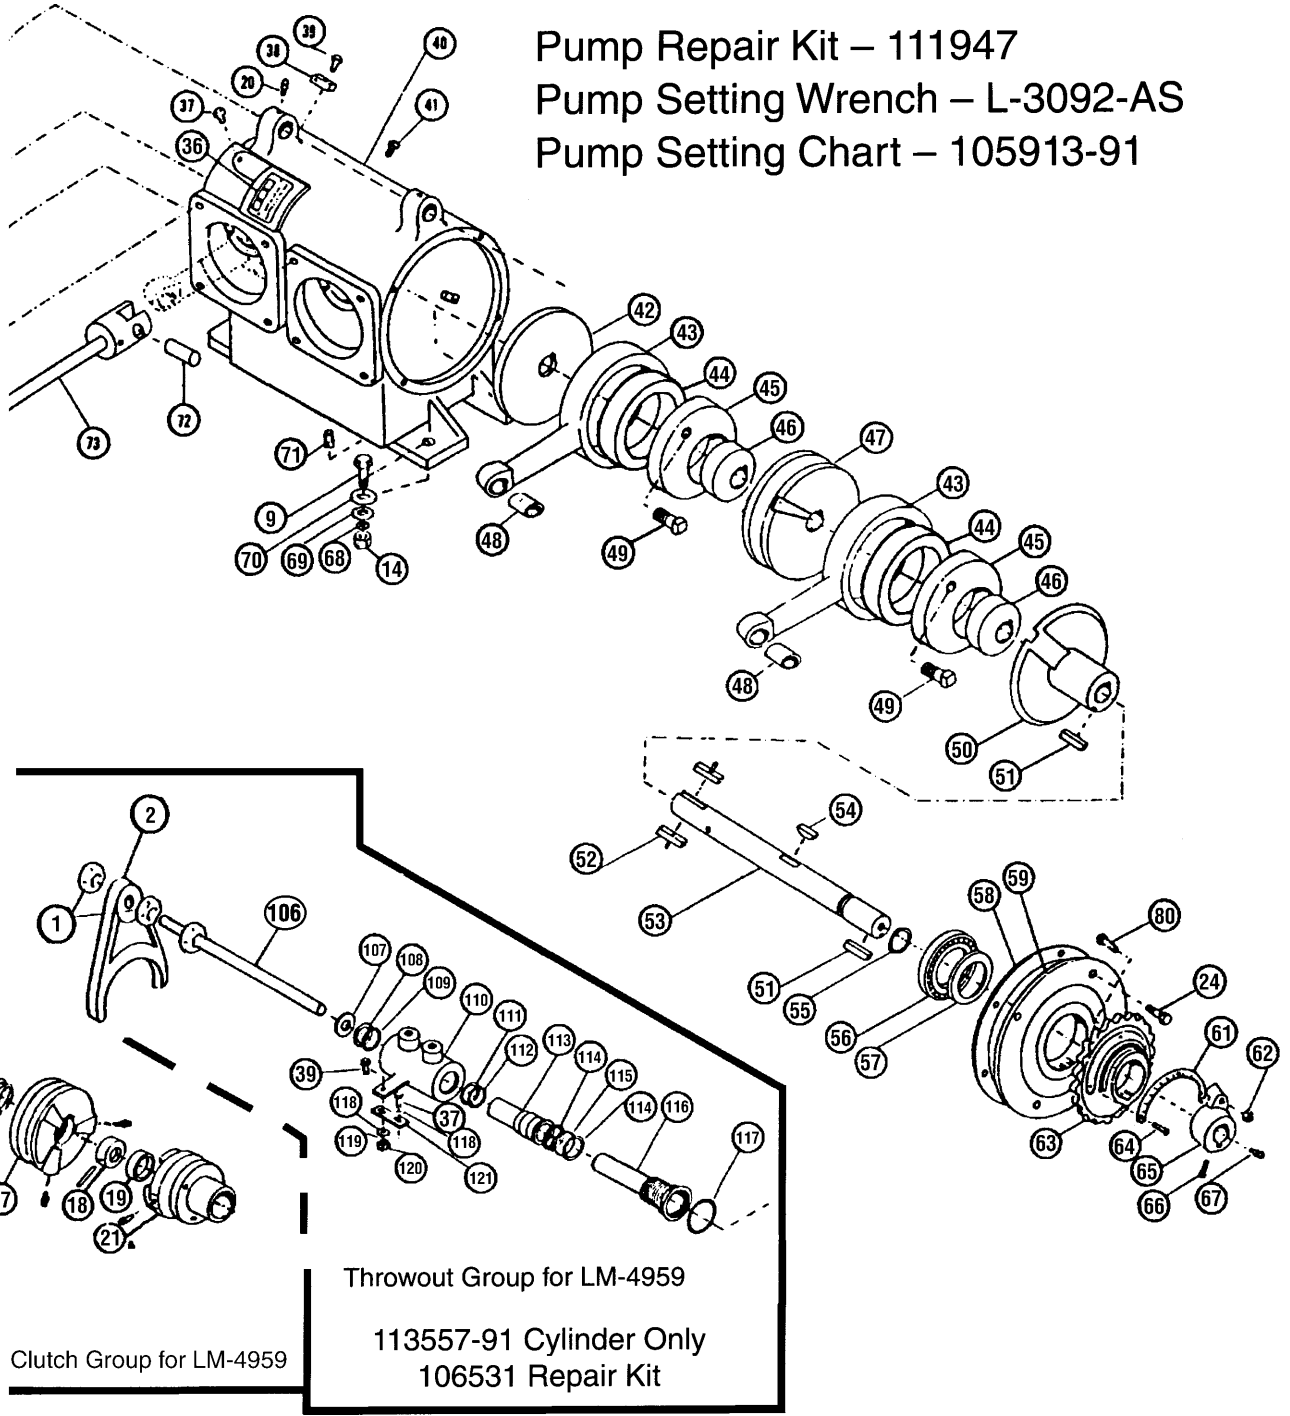

Series LM-4950 Metering Pumps



REF. NO.	PART NO.	ITEM DESCRIPTION	4950 QTY.	4955 QTY.	4959 QTY.	REF. NO.	PART NO.	ITEM DESCRIPTION	4950 QTY.	4955 QTY.	4959 QTY.
1	92037	5/8" JAM NUT	2	0	2	60	91017	3/8 SQUARE HEAD BOLT	1	1	1
2	113628-01	TROW OUT YOKE	1	0	1	61	114763-01	PUMP SETTING SCALE	1	1	1
3	92014	#10 SQUARE NUT	1	0	0	62	A-3097	3/8 SELF LOCKING NUT	1	1	1
4	A-697	WASHER	2	0	0	63	105932-91	STROKE SETTING FLANGE	1	1	1
5	A-2762	CAM ROLLER	2	0	0	64	A-368	SETTING SCALE SCREW	3	3	3
6	A-2763	ROLL PIN	1	0	0	65	105933-91	STROKE SETTING ARM	1	1	1
7	90953	2 1/4 RD HD SCREW	1	0	0	66	90532	5/16 X 3/8 SET SCREW	3	3	3
8	L-3006	THROW OUT ROD	1	0	0	67	H-30	GREASE FITTING	3	3	3
9	90655	3/8 X 1 1/2 HEX BOLT	5	4	4	68	93024	3/8 LOCK WASHER	4	4	4
10	F-48	THROW-OUT LEVER SPRING	1	0	0	69	93011	3/8 FLAT WASHER	4	4	4
11	94010	5/32 X 1 COTTER PIN	1	0	0	70	A-147	LEG MOUNTING PAD	4	4	4
12	90653	3/8 X 1 1/4 HEX BOLT	2	0	1	71	C-431-B	PLUG	3	3	3
13	L-3064	THROW-OUT LEVER	1	0	0	72	105895-01	CROSSHEAD PIN	2	2	2
14	92024	3/8 HEX NUT	14	12	12	73	105900-91	PISTON ROD ASSEMBLY	2	2	2
15	A-50	HANDWHEEL	1	0	1	74	L-3052	CROSSHEAD, GUIDE GASKET	2	2	2
16	HA-57	SAFETY CLUTCH SPRING	1	0	0	75	111935-01	CROSSHEAD GUIDE	2	2	2
16A	108907-01	SAFETY CLUTCH SPRING	0	0	1	76	111943-01	O-RING	2	2	2
17	A-260	CLUTCH	1	0	0	77	L-1109	ROD VEE PACKING SET	4	4	4
17A	108905-91	CLUTCH	0	0	1	78	L-1041	WASHER	6	6	6
18	105373-01	CLUTCH COLLAR	1	0	1	79	L-1063	PACKING SPRING	4	4	4
19	A-116	OLITE BUSHING	2	0	2	80	L-3074	STUFFING BOX GASKET	2	2	2
20	H-28	GREASE FITTING	6	2	5	81	111937-01	OUTBOARD STUFFING BOX	2	2	2
21	L-4008-A	SPROCKET CARRIER	1	0	0	82	L-3035	GASKET	2	2	2
21A	108906-01	SPROCKET CARRIER	0	0	1	83	L-1042	RETAINING RING	2	2	2
22	L-4007	18T SPROCKET	1	0	1	84	L-1031-2	STUFFING BOX INSERT	2	2	2
23	90993	1/4 X 1 1/2 SOCKET HD BLT	3	0	3	85	111938-01	INBOARD CYLINDER	2	2	2
24	90637	5/16 X 1 HEX BOLT	16	16	16	86	112816-91	PISTON PLUNGER ASSBLY.	2	2	2
25	L-4249	DRIVE PIN	1	0	1	87	L-1047	SELF LOCKING NUT	2	2	2
26	A-2758-A	PAWL	1	0	0	88	L-1045-V	FLANGE PLUNGER PACKING	4	4	4
27	A-2757-A	THROW OUT CAM	1	0	0	89	L-1098	PACKING ADJSTMT. GASKET	4	4	4
28	L-3007	THROW OUT BRACKET	1	0	0	90	L-1044-A	FLANGE PACKING WASHER	2	2	2
29	114165-01	RT. HAND TORSION SPRING	1	0	0	91	C-3519	2" THREAD PROTECTOR	1	1	1
30	L-4009	RETAINING COLLAR	1	0	1	92	92029	1/2 HEX NUT	4	4	4
31	110155-01	WASHER, NYLON	1	1	1	93	111939-01	SUCTION MANIFOLD	1	1	1
32	L-1018	OIL SEAL	1	1	1	94	109112-92	SUCTION VALVE	4	4	4
33	L-3023	BEARING HOUSING	1	1	1	95	A-2848	VALVE O-RING	8	8	8
34	L-3021	BEARING HOUSING GASKET	1	1	1	96	111940-01	OUTBOARD CYLINDER	2	2	2
35	L-3019	CRANKSHAFT BEARING	1	1	1	97	91051	3/8 X 8 HEX HEAD BOLT	8	8	8
36	111958-01	NAMEPLATE	1	1	1	98	109113-92	DISCHARGE VALVE	4	4	4
37	90634	5/16 X 1/2 BOLT	1	2	2	99	111936-01	DISCHARGE MANIFOLD	1	1	1
38	L-4014	SPRING ANCHOR	1	0	0	100	111955-01	STUD, MANIFOLD	2	2	2
39	90636	5/16 X 3/4 BOLT	1	0	2	101	L-3115	1 1/2 THREAD PROTECTOR	1	1	1
40	113634-01	CRANKCASE	1	1	1	102	106532-01	18T SPROCKET	0	1	0
41	S-350	VENT PLUG	1	1	1	103	90986	3/8 X 5/8 SET SCREW	0	4	0
42	L-3020	CRANKSHAFT DISC	1	1	1	104	110147-01	SPACER	0	1	0
43	113645-91	CONNECTION ROD	2	2	2	105	106533-01	CRQNKSHAFT	0	1	0
44	113629-01	BEARING CRANK PIN	2	2	2	106	114708-91	THROW OUT ROD ASSEMBLY	0	0	1
45	113633-01	LARGE ECCENTRIC	2	2	2	107	93016	FLAT WASHER	0	0	1
46	L-3017	SMALL ECCENTRIC	2	2	2	108	105448-01	BACK-UP RING	0	0	1
47	L-3018	STROKE TRANSFER SLEEVE	1	1	1	109	A-3776	O-RING	0	0	1
48	113588-01	CONNECTING ROD BUSHING	2	2	2	110	105447-01	BODY	0	0	1
49	L-3004	ECCENTRIC PIN	3	3	3	111	105452-01	BACK-UP RING	0	0	1
50	L-3056	STROKE LOCATING SLEEVE	1	1	1	112	105461-01	O-RING	0	0	1
51	L-1020	SETTING ARM KEY	2	2	2	113	105449-01	PISTON	0	0	1
52	A-261	CLUTCH KEY	2	0	2	114	105465-01	BACK-UP RING	0	0	2
53	L-3013	CRANKSHAFT	1	0	1	115	A-2849	O-RING	0	0	1
54	A-4333	KEY, WOODRUFF	2	2	2	116	105463-01	CYLINDER	0	0	1
55	L-1022	CRANKSHAFT O-RING	1	1	1	117	105500-01	BODY O-RING	0	0	1
56	L-1007-A	BEARING, LOCATING SLEEVE	1	1	1	118	93010	5/16 FLAT WASHER	0	0	4
57	L-1021	OIL SEAL	1	1	1	119	93023	5/16 LOCK WASHER	0	0	2
58	L-3002	COVER PLATE GASKET	1	1	1	120	92020	5/16 HEX NUT	0	0	2
59	L-3001	COVER PLATE	1	1	1	121	105501-01	STRAP	0	0	2